

## Door Rail Inner Clamp 300mm - 12mm Glass ( Model: KIC1230 )



- There must be 5mm space left at both ends for end cap.
- Clean up the glass on both edges for the clamps.
- Seperate the inner clamp and remove cover on tape to expose adhesive.
- Put the clamp on the glass and make sure it is edge to edge.
- Tighten bolt and nuts to be level.


### Attributes:

**Product Code:** KIC1230


**Unit Of Sale:** Each

#### Swing Door

\* Floor Spring or Overhead Concealed door closer must be fitted on the side off longer inner clamp.

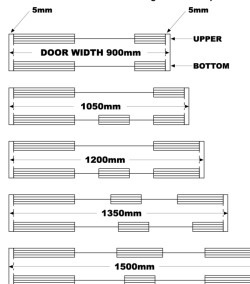

#### INSTALLATION DATA

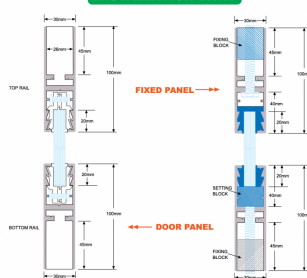

#### Auto Door (Sliding Door)

\* The max. space required between two inner clamps for upper rail is 100mm

